

Machine	Explode	Code	Description
Waring Food Processor WFP14SCK	1	AE050	SMALL PUSHER
Waring Food Processor WFP14SCK	2	AE051	LARGE PUSHER
Waring Food Processor WFP14SCK	3	AE052	BOWL COVER
Waring Food Processor WFP14SCK	4	AE053	COVER SEAL
Waring Food Processor WFP14SCK	5	AE054	BOWL
Waring Food Processor WFP14SCK	6	AE055	CONTINUOUS FEED COVER
Waring Food Processor WFP14SCK	7	AE056	CONTINUOUS FEED BOWL
Waring Food Processor WFP14SCK	8	AE057	DISC STEEM
Waring Food Processor WFP14SCK	9	AE058	SLINGER
Waring Food Processor WFP14SCK	10	AE059	SERRATED S BLADE
Waring Food Processor WFP14SCK	032268	*	BASE UNIT ASSY
Waring Food Processor WFP14SCK	032238	AD789	2MM-5/64 " SLICING DISC
Waring Food Processor WFP14SCK	032217	AC667	4MM-5/32" SHREDDING DISC
Waring Food Processor WFP14SCK	029451	AD362	START CAPACITOR
Waring Food Processor WFP14SCK	503370	~	PCB ASSY
Waring Food Processor WFP14SCK	029450	~	STOP CAPACITOR
Waring Food Processor WFP14SCK	030191	~	BOTTOM HOUSING (BLACK)
Waring Food Processor WFP14SCK	030194	*	SWITCH
Waring Food Processor WFP14SCK	029452	*	STARTING RELAY
Waring Food Processor WFP14SCK	030182	*	MICRO SWITCH SEAL
Waring Food Processor WFP14SCK	029448	~	MICRO SWITCH

